

# HOT BRUSH



hh simonsen<sup>®</sup>



HOT BRUSH  
STRAIGHTENER

## INDEX

### English version

Product information: 4

General use: 4

Safety instructions: 4

Warning: 5

## INDHOLD

### Dansk version

Produktinformation: 6

Almindelig brug: 6

Sikkerhedsanvisninger: 6

Advarsel: 7

Straightening while combing/Glatte håret, mens du reder det.

Eliminates frizz/Modvirker krus

Leaves hair shinier/Giver glans

Adjustable temperature/Justerbar temperatur

Ergonomic design/Ergonomisk design

Anti-scald materials/Anti-skoldning materialer

hh simonsen®



3 metre cord  
3 meter ledning



## PRODUCT INFORMATION

Thank you for choosing this HH Simonsen® product. Our new Hot Brush has been designed for professional use and combines state-of-the-art design with great functionality and performance.

HH Simonsen® Hot Brush is a brush and a straightening iron in one and is both practical and easy to use. The revolutionary brush emits heat while combing, making hair smooth and shiny up to five times faster than a traditional straightening iron. At the same time the brush massages the scalp during styling. The Hot brush is created in anti-scald materials and designed to be ergonomic and comfortable to use.

Before operating this HH Simonsen® Hot Brush, please read the following instructions and safety precautions carefully and keep them for future reference.

## USER'S MANUAL

Always operate according to the instructions. HH Simonsen® cannot be held responsible for any direct or indirect damage caused by misuse.

### Temperature settings

Use the brush to straighten your hair choosing between 10 different temperature settings. There are three different temperature intervals, and within each interval you can change the temperature 5 degrees Celsius. We recommend that you choose the highest number of degrees at the beginning, then reduce temperature according to hair texture:

1. Fine hair: Choose temperature 210-230
2. Normal hair: Choose temperature 190-210
3. Soft hair: Choose temperature 170-200

To turn on the straightener, press on-off key for 3 seconds. To turn it off, press again for 3 seconds.

## HOW TO USE

1. Run a comb through your hair prior to use. Make sure your hair is completely dry when using.
2. Plug in the straightener.
3. Turn on the straightener pressing the on-off key for 3 seconds.
4. Adjust temperature.
5. Take a lock of hair, and run the brush through it – if the straightener is set on a low temperature you may need to move it slowly down your hair. And remember: the smaller the lock of hair, the better the result.
6. Continue running the brush through your hair until it is straight and smooth.
7. Turn off the straightener. It will turn off automatically if not used in an hour.

**Note:** If you want the straight finish to last longer, apply a smoothing balm or oil to your hair before using the straightener.

**Before operating this HH Simonsen® Hot Brush, please read the following safety instructions carefully and keep them for future reference.**

### IMPORTANT SAFETY INSTRUCTIONS

Note: Read all safety instructions before use and always operate according to the instructions!

HH Simonsen® cannot be held responsible for any direct or indirect damage caused by misuse of this product.

### Explanation of terms

In the safety instructions you will come across some terms which indicate the level of risk. These are explained below.

### Danger:

**High Risk!** Failure to comply with this warning can be fatal or may result in serious injury. Ignoring the

instructions displaying this warning can kill, seriously injure and/or damage the appliances.

**Attention:** Medium Risk. Failure to comply with this warning may result injury or damage to property.

**Note:** Low Risk. This information should be taken into account when handling the appliance.

### SAFETY PRECAUTIONS

When using this and other electric appliances, these basic safety precautions should always be followed.

### Danger: High Risk!

- Only use the HH Simonsen® Hot Brush to style human hair.
- Do not use on artificial or animal hair.
- Do not use the heating elements to dry objects.
- The appliance must never be used in the bath, shower or over a filled wash basin or other container containing liquid.

- The appliance should not be operated with wet hands
- Do not immerse with wet hands.
- Do not immerse the appliance in water or rinse under dripping wet hair. When connected to the power supply, never leave the appliance unattended.
- Check the mains voltage according to the voltage specified on the rating plate.

### Never switch on the appliance when:

- The appliance or the power lead is damaged.
- The device has been dropped, shows visible damage or is not functioning properly.
- The appliance is damaged to such an extent that electrical parts are exposed. Whenever this is the case, disconnect immediately from the power supply and contact the place of purchase. Please note that the manufacturer's 12-month warranty covers parts failure only and does not cover accidental damage or excessive wear or tear.



UK

**The product must be unplugged from the power supply when:**

- A defect occurs during operation.
- You wish to clean the appliance.
- The application power switch is in off position.
- The appliance is not being used.

**Attention!**

- Risk of burns! Do not let bare skin come into contact with the appliance during or after use until it has cooled down.
- When in use, the power cable should not be allowed to come into contact with the heated appliance.
- Do not wind the power cable around the appliance, this can break the cable!
- When in operation only place the appliance on heat resistant surfaces.
- Make sure the appliance has completely cooled down before storing away.

- This appliance is designed for indoor use only. Do not use outdoors e.g. in a garden or on a terrace etc.

Note: This appliance has been designed for commercial use; however it can be used in either commercial or domestic environments. Care should be taken to ensure the user has read and understand the safety instructions.

**Cleaning and care**

To ensure your HH Simonsen® product remains in good working order, clean the appliance regularly. This will remove hair products or any other residue that can damage the appliance. Before cleaning, ensure the appliance is unplugged.

**Disposal**

Equipment that has come to the end of its service life should undergo correct disposal in accordance with the law. Plastics and electronic parts should be submitted

for recycling. Please enquire at your municipal waste disposal site.

**WEEE**

WEEE is short for "Waste from Electrical and Electronic Equipment" and is used EU-wide as a common designation for such waste (electronic scrap).

**Specifications**

Voltage: double voltage: 100-240V  
Watt power: average 29W

HH Simonsen® can not be held responsible for damaged hair / hair extensions.

**Warranty**


All HH Simonsen® products are covered by a 12 month warranty. Please retain your original purchase receipt or invoice as a proof of date of purchase. The defect iron

must be returned to the original place of purchase in its original packing and along with this warranty as well as the proof of purchase. The guarantee is only valid if the appliance has been operated in strict accordance to the safety instructions.

**Warranty Exclusions**

- Damages caused by normal wear and tear including chips, scratches, abrasions, discolorations or fading and damage to the power cord.
- Damages caused by careless or improper transportation.
- Damages caused by misuse of improper voltage and current.
- Damages caused by negligence, disassembly or dropping.
- Damages caused by attempt to repair.
- Any other damage which is not caused due to defect materials or poor workmanship.

HH Simonsen® can not be held responsible for damaged hair / hair extensions.

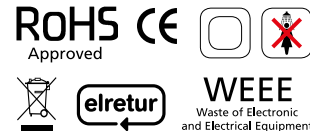



DK

Tak fordi du valgte dette HH Simonsen®-produkt. Vores Hot Brush er designet til professionelt brug og er i en absolut klasse for sig – både hvad angår design, funktionalitet og performance.

#### PRODUKTINFORMATION

HH Simonsen® Hot Brush er børste og glattejern i ét og er både praktisk og nem at bruge. Den revolutionerende børste udsender varme, imens du reder håret, og giver dig glat og glansfuldt hår op til fem gange hurtigere end et almindeligt glattejern. Samtidig sørger børsten for at massere hovedbunden, mens du styler. Hot Brush er udviklet i materialer, som gør, at du ikke brænder dig, og designet med ergonomi og komfort for øje.

#### BRUGERVEJLEDNING

Husk altid sikkerhedsforanstaltningerne, når du anvender produktet. HH Simonsen kan ikke holdes ansvarlig for defekter grundet forkert brug

#### Temperaturindstillinger

Børsten har tre forskellige temperatur-intervaller, og indenfor hvert interval kan temperaturen justeres 5 grader. Vi anbefaler, at du starter med den højest mulige temperatur, og dernæst justerer temperaturen afhængig af dit hårs tekstur:

1. Fint hår: Vælg 210-230
2. Normalt hår: Vælg 190-210
3. Blødt hår: Vælg 170-200

For at tænde glattejernet, skal du holde tænd/sluk-knappen ned i tre sekunder. Det samme skal du gøre, når det skal slukkes.

#### SÅDAN GØR DU

1. Red håret igennem inden brug. Håret skal være helt tørt.
2. Sæt børsten i stikkontakten.

3. Tænd glattejernet ved at holde on-off-knappen nede i 3 sekunder.

4. Indstil temperatur.

5. Tag en hårløk, og køør børsten igennem. Jo lavere temperatur, desto langsommere skal du bevæge børsten. Og husk, at jo færre hår du tager ad gangen, desto bedre bliver resultatet.

6. Fortsæt med at køør børsten igennem dit hår, indtil det er glat.

7. Sluk for glattejernet, og tag det ud af stikkontakten. Det vil slukke automatisk, når det har været tændt i en time.

Obs: Hvis du vil sikre et resultat, der holder, bør du bruge en blødgørende olie eller lign., inden du bruger børsten.

**Før du bruger denne HH Simonsen® Hot Brush, bedes du læse følgende sikkerhedsvejledning grundigt.**

#### VIGTIGE SIKKERHEDSFORANSTALTNINGER

OBS: Læs disse instruktioner nøje, inden du tager apparatet i brug. Anvisningerne er udarbejdet for at hindre ukorrekt brug og sikkerhedsrisici. HH Simonsen® kan ikke blive holdt ansvarlig for direkte eller indirekte skader forvoldt på grund af forkert brug eller misvedligeholdelse.

#### Forklaringsliste

I sikkerhedsbestemmelserne vil du finde en række termer, som bruges til at indikere risiko-niveauet. Disse er forklaret nedenfor.

#### Fare:

**Høj risiko:** Efterkommes denne advarsel ikke, kan det være dødbringende eller resultere i alvorlig personskade.

**Forsigtig:** Middel risiko: Efterkommes denne advarsel ikke, kan det resultere i personskade.

**Bemærk:** Lav risiko: Disse sikkerhedsinformationer skal huskes, når apparatet er i brug.

#### SIKKERHEDSINFORMATIONER

Når du anvender dette og andre elektriske apparater, skal følgende sikkerhedsforanstaltninger altid følges. Fare: Høj risiko!

- Apparatet må kun anvendes på menneskehår.
- Apparatet må ikke anvendes på kunstigt hår eller dyrehår.
- Apparatet må ikke anvendes i badekarret, brusebadet eller over en fyldt håndvask eller andre beholdere indeholdende væske.
- Apparatet er elektrisk og må derfor ikke komme i forbindelse med rindende vand, da dette kan skade apparatet og/eller medføre alvorlig personskade. Apparatet skal holdes tørt hele tiden.

- Apparatet må ikke anvendes med fugtige eller våde hænder.
- Apparatet må ikke anvendes på vådt hår.
- Apparatet må ikke efterlades uden opsyn med ledningen i stikket.
- Tjek altid stikkontaktens spændingseffekt (volt), så den passer til produktets elektriske specifikationer.
- Elektriske apparater bør holdes udenfor børns rækkevidde, og børn bør ikke lege med hverken produktet eller emballagen.
- Apparatets ledning bør placeres, så man ikke kan falde over den.
- Beskyt apparatets ledning. Træk aldrig i ledningen, men frigør stikket fra stikkontakten ved at trække i selve stikket.
- Undgå brandfare. Placér aldrig det tændte apparat i nærheden af håndklæder, andre tekstiler eller andre brandbare materialer.
- Forsøg aldrig selv at reparere apparatet eller ledningen.



DK

**Tænd aldrig for apparatet når:**

- Apparatet eller ledningen er beskadiget.
- Apparatet har været tabt, og/eller der er synlige tegn på skader.
- Hvis apparatets elektriske dele kan ses. Skulle apparatet ved en fejl være blevet tilsluttet strøm, sluk apparatet, og fjern straks ledningen fra stikkontakten. Er dit apparat defekt eller beskadiget, og ønsker du at reklamere eller få apparatet repareret, skal du aflevere det der, hvor det er købt. Husk din købskvittering. Bemærk, at garantien bortfalder, hvis apparatet er misvedligeholdt eller anvendt i strid med vores retningslinjer.

**Fjern ledningen fra stikkontakten såfremt:**

- Apparatet er defekt under brug.
- Apparatet skal rengøres.
- Apparatet står på OFF.
- Apparatet ikke bruges.

**Bemærk!**

- Risiko for forbrænding! Undgå kontakt med huden, da dette kan forårsage brændemærker. Bemærk, at apparatet også er varme et stykke tid efter end brug!
- Dette glattejern er lavet af elektronik og plastik, så du skal derfor behandle det forsigtigt. Tab eller kast det ikke, og bræk ikke delene fra hinanden. Lad ikke apparatet eller ledningen komme i forbindelse med meget varme kilder, som fx. kogeplader.
- Ledningen må ikke ligge på varme overflader, som kan forårsage nedsmeltning af ledningens isoleringslag.
- Rul ikke ledningen rundt om apparatet, da ledningen kan knække.
- Under brug skal apparatet placeres på en fast, ikke-brændbar overflade.
- Apparatet skal altid nedkøle

**Rengøring og vedligeholdelse**

For at sikre, at dette HH Simonsen®-produkt holder sig

i god stand, skal det rengøres regelmæssigt. Dette vil fjerne rester af hårprodukter og lign., som kan skade apparatet. Rengør apparatet med en opvredet (ikke våd) klud. Sørg altid for, at apparatet ikke er sat til strøm eller varmt, når det skal rengøres.

**Bortskaffelse**

Elektriske apparater, som ikke længere kan bruges, skal bortskaffes korrekt. Elektriske apparater skal afleveres til genanvendelse. Aflever venligst apparatet på den lokale genbrugsplads.

**Strømforsyning**

Volt: dobbelt volt: 100-240V

Watt: gennemsnit: 29W

**WEEE**

WEEE er en forkortelse for "Waste from Electrical and Electronic Equipment" og er en række retningslinjer

for bortskaffelse af elektrisk affald, som er gældende i hele EU.

**Garantibestemmelser**


Opstår der problemer med dit glattejern, skal det indleveres hos forhandleren. Husk at medbringe kvittering eller andet købsbilag. Bemærk: Glattejern, som ikke er rensat og vedligeholdt efter vores anvisninger er ikke omfattet af garantien.

**Garantien omfatter ikke:**

- Skader, som skyldes normal slidtage såsom ridser på plastikdelene, farveændringer eller skade på ledningen.
- Skader, som skyldes upassende forsendelse.
- Skader, som skyldes forkert spænding og strømtilslutning.
- Skader, som skyldes tab af apparatet, slag eller lignende.
- Skader, som skyldes egne reparationer eller reparationer udført af en ikke-autoriseret reparatør

- Skader, som med skøn ikke er produktionsfejl.

HH Simonsen® kan ikke holdes ansvarlig for ødelagt hår.

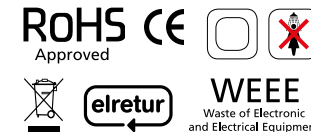



[www.hhsimonsen.dk](http://www.hhsimonsen.dk)