



hh simonsen®

HOT AIR BRUSH
NATURAL VOLUME

INDEX

- 04 Hot Air Brush
- 08 Safety Instructions
- 12 Warranty

INDHOLD


- 04 Hot Air Brush
- 14 Sikkerhed
- 17 Garanti

HOT AIR BRUSH NATURAL VOLUME

Special hot bristles for drying,
smoothing and styling hair

Ionic generator for
frizz-free hair

Fit for both fine, medium
and coarse hair

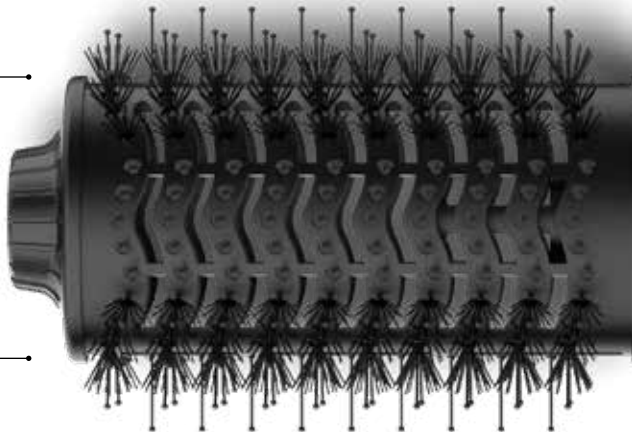



Lightweight ergonomic design

Voltage: 110/240V, 50/60Hz and 1000 W

hh simonsen

OFF
AIR
LOW
HIGH

Large power of 1000W to
help dry hair quickly

Professional 360 degree swivel cord

AIR: High speed wind and low temperature.
LOW: Low speed wind and high temperature.
HIGH: High speed wind and high temperature.

SAFETY INSTRUCTIONS

Thank you for choosing HH Simonsen® Products.

It has always been HH Simonsen®'s ethos to provide our consumers with high quality professional styling products.

All HH Simonsen® hair stylers are easy to handle due to their ergonomic design and have been considerably reduced in weight. Unlike many stylers, we also boast a smooth action 'swivel' cord that eliminates tangled power cables.

If used correctly, in accordance with the Safety Instructions, our products should provide you with years of use and ultimately give you the results you are looking for! We hope our product will give you the most delightful styling experience.

1. Safety

Before using any HH Simonsen® product, please read the following instructions carefully. This will safeguard you from possible hazards and prevent the appliance from damage caused by incorrect operation. Always operate according to the instructions! HH Simonsen® cannot be held responsible for any direct or indirect damage caused by misuse of this product.

1.1 Explanation of Terms

You will find the following terms displayed in these safety notes: **Danger: High Risk!** Failure to comply with this warning can be fatal or may result in serious injury. Ignoring the instructions displaying this warning can kill, seriously injure and/or damage the appliances.

!Attention: Medium Risk. Failure to comply with this warning may result in injury or damage to property.

Note: Low Risk. This information should be taken into account when handling the appliance.

1.2 General Safety

Danger: High Risk!

- Only use the HH Simonsen® styler to style human hair.
- Do not use it on artificial or animal hair.
- Do not use the heating elements to dry objects.
- The appliance must never be used in the bath, shower or over a filled wash basin or other containers containing liquids.
- The appliance should not be operated with wet hands.
- Do not immerse with wet hands.
- Do not immerse the appliance in water or rinse under running, dripping wet hair. When connected to the power supply, never leave the appliance unattended.
- Check the mains voltage according to the voltage specified on the rating plate.

Never switch on the appliance when:

- The appliance or the power lead is damaged.
- The device has been dropped, shows visible damage or is not functioning properly.

- The appliance is damaged to such an extent that electrical parts are exposed.
- Whenever this is the case, disconnect immediately from the power supply and contact the place of purchase.

The product must be unplugged from the power supply when:

- A defect occurs during operation.
- You wish to clean the appliance.
- The application power switch is in off position.
- The appliance is not being used.

Danger: High Risk!

- Electrical appliances should be kept away from children. Children should not be allowed to use or play with the appliance or the products packaging, e. g. plastic wrapping or films should also be kept out of reach of babies and young children.
- Arrange the power lead in a way that it will not cause obstruction or can be tripped over.

- Protect the power lead from damage. Never pull on the power lead, hold the power plug when removing it from the power socket.
- Clean the product with a slightly dampened cloth (not wet). Always disconnect the product from the power supply before cleaning and ensure the unit has cooled down.
- Never use petrol spirits or other abrasive cleaning substances.
- To prevent possible overheating, never place towels or similar items over or under the appliance.
- Do not use the appliance near combustible gases e.g. directly in the airflow of sprays, aerosols and styling foams.
- Do not attempt to repair the product or connection cable by yourself.
- Do not use an extension cable with this appliance.
- As with most electrical appliances, electrical parts remain live even when the unit is switched off.

! Attention

- Risk of burns! Do not let bare skin come into contact with the heating plates during or after use until such time that the plates have cooled down.
- When in use, the power cable should not be allowed to come into contact with the heating plates.
- Do not wind the power cable around the appliance, this can break the cable!
- When in operation only place the appliance down on firm heat resistant surfaces.
- Make sure the appliance has completely cooled down before storing away.

SAFETY INSTRUCTIONS AND WARRENTY

- This appliance is designed for use indoors only. Do not use outdoors e.g. in a garden or terrace etc.
- This appliance has been designed for use as a hairstyling styler only and must only be used with product specifically designed for use with a heated styler.

Note

This appliance has been designed for commercial use, however it can be used in either commercial or domestic environments. Care should be taken to ensure the user has read and understand the safety instruction.

2. INSTRUCTIONS FOR USE:

Before use, make sure hair is clean, dry and detangled. Start with a low temperature and increase until you find the right temperature for your hair type. Plug in the hair dryer to the correct power supply.

Select the heat and airflow:

1: AIR to set the style position

2: LOW for Fine to Medium Hair Position

3: HIGH for Medium to Coarse hair

Take a section of hair and hold it taut. Push the brush into the hair so that the bristles are pushed down into the hair. Then pull the brush through the hair like a normal hairbrush while ensuring you continue to hold your hair taut. The slower you glide the brush through the hair the more effective the straightening will be. Repeat until you have straightened your entire head of hair and have achieved your desired look.

TIP: The styling results depend upon the thickness and amount of curl in the hair. Thicker and curlier hair will take longer to style and you may need to glide the brush more slowly through the hair. For very tangled hair, you may need to brush through the hair first with a regular hairbrush.

3. Cleaning and care

Ensure the unit is unplugged and cool. Wipe clean any build up of styling products with a damp cloth (do not scrub). Do not use an abrasive cleaning fluid to clean, as damage will occur.

4. WARNING:

To reduce the risk of burns, electrocution, fire or injury to persons:

1. When not in use, unplug it. Allow the appliance to cool and store in a safe, dry location.
2. This iron is hot when in use. Do not let eyes and bare skin touch heated surfaces.
3. Do not place the heated iron directly on any surface while it is hot or plugged in.
4. An appliance should never be left unattended when plugged in.

5. Close supervision is necessary when this appliance is used by, on or near children or individuals with certain disabilities.
6. Use this appliance only for its intended use as described in this manual. Do not use attachment not recommended by the manufacturer.
7. Never operate this appliance if it has a damaged cord or plug.
8. Never allow the power supply cord to be pulled, jerked, strained, twisted or severely bent, especially at the plug connections. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short. Handle the cord carefully for longer life.
9. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
10. Never drop or insert any object(s) into any opening.
11. Do not use outdoors or operate where aerosol spray products are being used or where oxygen is being administered.
12. Do not use an extension cord with this appliance

13. Never use while sleeping.
14. Do not operate with voltage converter.
15. This appliance is provided with a protective device that may make this appliance inoperable under some abnormal conditions (such as immersion of the appliance).
16. This product is for household and indoor use only.
17. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
18. Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

5. Disposal

Equipment that has come to an end of its service life should undergo correct disposal in accordance with the law. Plastics and electronic parts should be submitted for recycling. Enquiry at your municipal waste disposal site.

Electrical and electronic equipment (EEE) contains materials, components and substances that may be hazardous and

present a risk to human health and the environment when waste electrical and electronic equipment (WEEE) is not handled correctly.

Equipment marked with the crossed-out wheeled bin (next page) is electrical and electronic equipment. The crossed-out wheeled bin symbol indicates that waste electrical and electronic equipment should not be discarded together with unseparated household waste, but must be collected separately. For this purpose all local authorities have established collection schemes under which residents can dispose waste electrical and electronic equipment at a recycling centre or other collection points, or WEEE will be collected directly from households. More detailed information is available from the technical administration of the relevant local authority.

Users of electrical and electronic equipment must not discard WEEE together with household waste. Residents must use the municipal collection schemes to reduce adverse environmental impacts in connection with disposal

SAFETY INSTRUCTIONS AND WARRENTY

of waste electrical and electronic equipment and to increase opportunities for reuse, recycling and recovery of waste electrical and electronic equipment".

WEEE

WEEE is short for "Waste from Electrical and Electronic Equipment" and is used Eu-wide as a common designation for such waste. (Electronic scrap)

6. Warranty

All HH Simonsen® products are covered by a 12 months warranty. Repaired within 12 months from date of purchase if it is found to be defective in materials or workmanship.

Please retain your original purchase receipt or invoice as a proof of date of purchase. The defective iron must be returned to the original place of purchase in its original packing and along with this warranty as well as the proof of purchase. This guarantee is only valid if the appliance has been operated in strict accordance to the safety instructions.


Warranty Exclusions

- Damages caused by normal wear and tear including chips, scratches, abrasions, discolorations or fading and damage to the power cord.
- Damages caused by careless or improper transportation.
- Damages caused by misuse of improper voltage and current.
- Damages caused by negligence, careless, disassembly or dropping.
- Damages caused by reparation or alteration which is not from the original manufacturer or its authorized agents.
- Any other damage which by HH Simonsen®'s judgment are not defective by materials or workmanship.

Specifications:

- 110/240V 1000 W
- 150H DC motor
- Three speed setting: air - low - high
- ION function
- Low Noise sound

Power supply: Power AC 110/240V, 50/60Hz, 1000W Dual Voltage, which can be used for both 110 and 240V.





BRUGERVEJLEDNING OG SIKKERHED

Tak fordi du har valgt et HH Simonsen® produkt.

Det har altid været HH Simonsens® mål at give vores kunder professionelle stylingtools i høj kvalitet.

Alle HH Simonsen® hårstylers er lette at håndtere, takket være det ergonomiske design og den markant reducerede vægt. I modsætning til mange andre stylers, bruger vi et nemt spiralkabel, der eliminerer risikoen for knuder på ledningen.

Hvis styleren bruges i henhold til sikkerhedsinstruktionerne, vil din styler kunne bruges i årevis til at give dig de resultater, du stræber efter! Vi håber vores produkt vil give dig en skøn stylingoplevelse.

1. Sikkerhed

Før styleren tages i brug, vær venlig at læse følgende instruktioner nøje. De sikkerhedsforanstaltninger, der er skrevet, vil du kunne bruge til at undgå risici og

hindre ukorrekt brug. Altid brug Air Styleren i henhold til instruktionerne! HH Simonsen® kan ikke blive holdt ansvarlig for direkte eller indirekte skader, forvoldt på grund af forkert brug eller misvedligeholdelse af styleren.

1.1 Forklaringsliste

Du vil finde følgende forklaringer brugt i sikkerhedsbestemmelserne.

! Fare: Høj risiko: Efterkommes denne advarsel ikke, kan det være dødbringende eller resultere i personskade.

! Fare: Middel risiko: Efterkommes denne advarsel ikke kan det resultere i personskade.

! Fare: Lav risiko: Disse sikkerhedsinformationer skal huskes og bruges, når styleren er i brug.

1.2 Generel sikkerhed

! Fare: Høj risiko!

- Styleren må kun bruges på rigtigt menneskehår.
- Styleren må ikke anvendes på kunstigt hår eller på dyrehår.
- Brug ikke styleren til at krølle andre objekter end men-

neskehår.

- Styleren må aldrig bruges i badet, brusenichen eller i et fyldt vandbassin eller væskebeholder.
- Styleren må ikke betjenes med våde hænder.
- Sæt ikke styleren under vand med våde hænder.
- Dyp ikke styleren i vandet eller rens under løbende, vådt hår.
- Styleren må ikke efterlades med ledningen i stikket uden opsyn.
- Tjek altid stikkontaktens spændingseffekt (volt), så det passer til produktets elektriske specifikationer.

Tænd aldrig for styleren når:

- Ledningen er beskadiget.
- Styleren er beskadiget.
- Styleren har været tabt, og der ses spor efter skader.
- Hvis stylerens elektriske dele kan ses.

Skulle styleren ved en fejl være blevet tilsluttet strøm, sluk for jernet og fjern straks ledningen fra stikkontakten. Aflever styleren der, hvor den er købt – husk købskvitteringen. Vær venlig at bemærke, at misligholdelse af styleren ikke kan blive omfattet af en garanti.

Fjern ledningen fra stikkontakten hvis:

- defekten forekommer i løbet af brug
- styleren skal rengøres
- styleren står på off
- styleren ikke bruges

! Fare: Højrisikoer

- Elektriske apparater bør holdes væk fra børn. Børn må ikke benytte eller lege med styleren eller indpakningen, osv. Plastikindpakning og folie skal også holdes væk fra babyer og små børn.
- Sæt ledningen på en sådan måde, at den ikke udgør en faldrisiko eller afspærring.

- Beskyt ledningen fra skader. Træk aldrig i ledningen og hold på stikket, når du fjerner den fra stikkontakten.
- Rengør styleren med en let fugtet klud (ikke våd). Fjern altid styleren fra stikkontakten, før du rengør den og er sikker på, at produktet er kølet ned.
- Brug aldrig sprit eller andre kraftfulde rengøringsmidler.
- For at undgå mulig overophedning, skal håndklæder og lignende ikke lægges over eller under styleren.
- Brug ikke styleren i nærheden af brandbare gasser, som ex i sprøjteretningen fra sprays, forstøvere og stylingskum.
- Forsøg ikke at reparere styleren eller kablet selv.
- Brug aldrig en forlængerledning.
- Som med andre elektriske apparater, er de elektriske dele fortsat i funktion, selv efter produktet er slukket.

! Bemærk

- Risiko for brandsår! Lad ikke huden komme i kontakt med de opvarmede dele under eller efter brug, indtil de er helt nedkølede.

- Når styleren er i brug, må ledningen ikke komme i nærheden af de opvarmede dele.
- Fold ikke ledningen rundt om styleren, da dette kan ødelægge ledningen!
- Når styleren bruges, placer da kun styleren på sikre varmeresistente overflader.
- Sørg for at styleren er helt nedkølet, før den pakkes væk.
- Dette apparat er designet til indendørs brug alene. Brug ikke udenfor, fx i haven eller på terrassen.
- Dette apparat er blevet designet med det formål at style hår alene og må kun anvendes med produkter, der er særligt designet til brug sammen med en opvarmet styler.

Note

Dette apparat er designet til kommercielt brug, men kan også bruges i både kommercielle og private rammer. Sørg for at brugeren altid har læst og forstået sikkerhedsinstruktionerne.

BRUGERVEJLEDNING, SIKKERHED OG GARANTI

2. BRUGERVEJLEDNING:

Sørg for at håret er rent, tørt og gennemredt inden brug. Start med en lav temperatur og skru op, indtil du finder den rette temperatur for din hårtype. Sæt air styleren i den korrekte stikkontakt.

Vælg den ønskede varmesetting og airflow vinkel.

1: AIR for at fastholde din style

2: LOW for fint til medium hår

3: HIGH for medium til tykt hår

Tag en sektion af hår og hold det stramt. Træk børsten igennem håret, så børsterne er trukket helt ned i håret. Glid børsten gennem håret som en normal hårbørste, mens du sikrer et fast tag i håret. Jo langsommere du glider børsten igennem håret, jo mere effektiv vil udglatningen blive. Gentag indtil du har udglattet hele håret og har opnået dit ønskede look.

TIP: Stylingresultatet afhænger af tykkelsen og mængden af krøl i dit hår. Tykt og krøllet hår vil kræve længere tid at style,

og du vil muligvis få brug for at glide børste mere langsomt gennem håret. For meget filtret hår kan det være nødvendigt at børste håret igennem med en almindelig hårbørste først.

3. Rengøring og vedligehold

Sørg for at apparatet er trukket ud af stikkontakten og er nedkølet. Fjern rester af stylingprodukter med en fugtig klud (uden at skrubbe). Brug ikke et hårdt rengøringsmiddel til rengøring, da dette kan skade styleren.

4. ADVARSEL:

For at mindske risiko for brandsår, elektrisk stød, ild eller anden personskade:

1. Når styleren ikke er i brug, trækkes stikket ud. Lad apparatet køle ned og opbevar det på et sikkert, tørt sted.
2. Styleren er varm, når den er i brug. Lad ikke øjne eller hud røre ved de opvarmede dele.
3. Placér ikke den opvarmede styler på nogen overflader, mens den er varm eller tændt.

4. Et apparat bør generelt aldrig efterlades uden opsyn, når det er sat til.
5. Særlig bevågenhed er nødvendig, når apparatet bruges i nærheden af eller på børn og/eller individer med særlige udfordringer.
6. Brug kun dette apparat som anvist i denne manual. Brug ikke ekstraudstyr på apparatet, der ikke er anbefalet af producenten.
7. Brug aldrig apparatet, hvis det har beskadiget ledning eller stik.
8. Lad aldrig ledningen bliver trukket, hevet, strukket, drejet eller stærkt bøjet, særligt ved stikket. Skader kan ske ved de bøjelige dele af stikket og tilslutningen til apparatet, der forårsager mulige brud og kortere produktlevetid. Pas godt på ledningen for en længere produktlevetid.
9. Hold ledningen væk fra opvarmede overflader. Sno ikke ledningen rundt om apparatet.
10. Sæt eller indfør ikke nogen objekter ind i apparatets åbninger.

11. Brug ikke udendørs, hvor forstøvere anvendes eller hvor nogen er tilsluttet luftforsyning.
12. Brug ikke en forlængerledning til dette apparat.
13. Brug aldrig mens du sover.
14. Brug ikke sammen med en spændingsomformer.
15. Dette apparat kommer med en beskyttende belægning, der gør den ikke-funktionsdygtig under unormale tilstande (såsom nedsækning af apparatet under vandet).
16. Produktet er kun beregnet til privat og indendørs brug.
17. Hvis tilslutningsledningen er beskadiget, skal den udskiftes med en særlig ledning tilgængelig fra producenten og dennes udbyder.
18. Brug ikke apparatet i nærheden af badekar, brusere, bassiner og andre beholdere med væske.

5. Bortskaffelse

Udstyr, der er i slutningen af dets produktlevetid, bør bortskaffes korrekt i henhold til loven. Plastik og elektronik skal så vidt muligt sorteres til genbrug. Ved tvivl kan spørgsmål rettes til din lokale kommununes affaldssortering.

Elektrisk og elektronisk udstyr (EEE) indeholder materialer, komponenter og substanser, der kan være farlige for helbredet og miljøet, når det ikke håndteres korrekt.

Udstyr markeret med de nedenfor afkrydsede affaldskategorier er elektrisk og elektronisk udstyr.

De afkrydsede affaldsspande indikerer at elektriske og elektroniske affaldsprodukter ikke bør bortskaffes sammen med usorteret hjemmeaffald, men skal sorteres separat. Til dette formål har lokale autoriteter etableret sorteringsregler, som hjælper beboere med at bortskaffe elektrisk og elektronisk affald ved et genbrugscenter eller andre indsamlingssteder. Mere information kan findes hos den tekniske administration i din lokale kommune.

Brugere af elektrisk og elektronisk udstyr må ikke udsmide WEEE i den almene husstands affald. Beboere må anvende kommunens indsamlingsplaner for at reducere miljøpåvirkning i forbindelse med bortskaffelse af elektrisk og elektronisk udstyr for at øge mulighederne for genanvendelse, genbrug og fornyelse af selvsamme udstyr.

Weee

WEEE er en forkortelse for "Waste from Electrical and Electronic Equipment" og anvendes i hele EU som en fælles betegnelse for affald fra elektriske og elektroniske produkter (elskrot).

6. Garanti

Alle HH Simonsen® produkter er dækket af en 12 måneders garanti. Dette betyder, at de reparerer indenfor 12 måneder af købstidspunktet, hvis det findes defekt i materiale eller konstruktion.

Vær venlig at beholde din originale kvittering eller faktura som bevis på dit køb.

Det defekte stylingtool skal sendes retur til dens originale sælger i sin originale indpakning sammen med garanti og købsbevis. Garantien er kun gældende, hvis stileren er blevet anvendt i henhold til sikkerhedsinstruktionerne.

BRUGERVEJLEDNING, SIKKERHED OG GARANTI

Undtagelser for garanti

- Skader skabt af normalt slid og brug, såsom hakker, ridser, misfarvninger eller farveskift og skader til ledning.
- Skader skabt af uforsigtig og uhensigtsmæssig transport.
- Skader skabt af fejlagtig brug af strømtilslutning.
- Skader skabt af uagtsomhed, ligegyldighed, demontering eller fald.
- Skader skabt af reparation eller ændringer, der ikke er udført af den originale producent eller autoriserede samarbejdspartnere.
- Alle andre skader, som efter HH Simonsens® vurdering ikke er defekt i materiale eller konstruktion.

Specifikationer:

110/240V 1000W

150H DC-motor

3 settings: AIR - LOW - HIGH

ION funktion


Støjsvag

WEEE

WEEE er en forkortelse for "Waste from Electrical and Electronic Equipment" og anvendes i hele EU som en fælles betegnelse for affald fra elektriske og elektroniske produkter (elskrot).

Strømforsyning: Power AC 220-240V, 50/60Hz, 1200W Dual Voltage, som kan bruges både til 220V og 240V.

HH Simonsen® kan ikke holdes ansvarlig for ødelagt hår eller hårextensions.







www.hhsimonsen.com